

KITCHEN STICKY™ SHIELD

Product Installation Sheet


WANT TO BE FEATURED?
FOLLOW, POST, TAG:
@HEATSHIELDPRODUCTS
#DIY



REV 04.20

Tools Required

- Gloves, safety glasses, and dust mask
- Heavy-duty scissors or utility knife
- Poster board or butcher paper
- Isopropyl alcohol or other non-residue cleaner
- Drywall screws for drywall applications

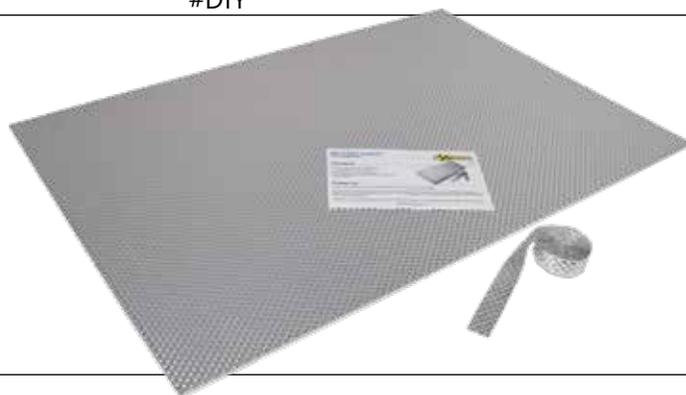

Installation Tips

Always wear safety glasses, dust mask and gloves when working with Sticky™ Shield.

Use poster board or butcher paper to make a template.

Sticky™ Shield works best on a dust free surface. It is recommended you paint or prime drywall before applying Sticky Shield™ and wipe it clean after it has dried.

Sticky Shield™ goes on drywall wall, refrigerator, or cabinet. DO NOT PLACE on the oven or stove.

This product is electrically conductive, be sure to insulate any terminals or circuits that may come in contact with this product.

Installation Steps

1. Kitchen Sticky Shield™ should be placed on the refrigerator, cabinet, or drywall. It should be stuck to the "cold" surface so it can reflect heat back into oven or stove.
2. Wall or cabinet temperature should be at least 50°F when applying, sticking onto anything colder may not allow adhesive to set up properly.
3. Be sure appliance, cabinet, or wall surface is dust free and clean. Drywall should have one coat of paint or primer. We strongly recommend rubbing the surface with a pre-paint cleaner or isopropyl alcohol (or other non-residue cleaner).
4. Measure the refrigerator panel, cabinet, or wall to be protected. Using a heavy duty pair of scissors to trim the Kitchen Sticky Shield™ to shape if necessary.
5. Carefully peel the adhesive backing off the Kitchen Sticky Shield™, do not peel more than 1/4" from the edge until you are sure the adhesive backing is not peeling off with the backing paper. We strongly recommend using a razor blade or utility knife to hold the corner of the adhesive to the KoolCore insulation while removing backing of the Kitchen Sticky Shield™.
6. Lay the Kitchen Sticky Shield by starting on one edge of the cabinet or wall and work out slowly to ensure no "bubbles" occur. Air bubbles will cause the material to not stick and fall off.
7. Press the Kitchen Sticky Shield™ firmly onto the refrigerator, wall, or cabinet while pressing down for 20 seconds.
8. You can use screws as an additional attachment method. We recommend you use them on drywall for additional support.
9. Use included edging tape to seal ends and seams of the Kitchen Sticky Shield. Clean the edge of Kitchen Sticky Shield™ with the pre-paint cleaner or isopropyl alcohol and the surface it will be used on.
10. Pre-fit and trim tape to fit the Kitchen Sticky Shield™.
11. It is important to do one edge/seam of Kitchen Sticky Shield™ at a time with the edge tape.
12. Peel adhesive backing off tape, press and firmly hold in place for 20 seconds.

HEATSHIELD PRODUCTS, INC.

Escondido, CA

© Heatshield Products, Inc.



(760) 751-0441

tech@heatshieldproducts.com

www.heatshieldproducts.com